

## Popcorn Machine Instructions

Please call us if you have any problems 0426 889 520

### Setting Up:

Please do not run any other machines on the same power point. Please place the machine under a tent for protection against wind and for shade from the sun.

Turn on the power switch to let the machine run for 1-2 minutes before you start. Please ensure the machine is on a steady surface and does not shake when turned on.

### Ready to Make Popcorn:

Lubricate the kettle with a generous amount of popcorn oil to start. Add 1 cup of popcorn kernels and a small amount of popcorn salt into the kettle. Close the cabinet doors as the popcorn will heat up and pop out into the warming cabinet when ready (it may take a while so pop some prior to your event). Taste for flavour – add more popcorn oil or salt if needed. To add more repeat process. Once you have enough (although you want to pop more later), turn off kettle and mixer. The popcorn will stay warm and fresh inside the cabinet.

### End of Use:

Once cooled, empty out excess popcorn and switch off machine motor and remove power lead from the machine.

Never attempt to repair the machine. Please call us if you have any problems 0426 889 520.

### Important:

**Do not attempt to operate the machine from portable generators.**

**Only one person to operate the machine at one time - (Minimum age 18). Only one person to operate the machine at one time - (Minimum age 18). The nominated person on the booking is responsible for the safe and care of the machine for the duration of the party. Until collection, the hirer will be responsible for any injury to people or damage to the machine or property, resulting from misuse or mis-handling of the machine, whether accidental or not.**



## Western Sydney Jump

Affordable & Reliable Party Hire

Jumping Castles, Carnival Food, Adult  
Inflatables, Giant Garden Games

Call 0426 889 520

[westernsydneyjump.com.au](http://westernsydneyjump.com.au)



## Fairy Floss Machine Instructions

Please call us if you have any problems 0426 889 520

### Setting Up:

Fit bowl around collar and place bubble around the lip of the bowl. Please do not run any other machines on the same power point. Place the machine under shade for protection against wind and sun.

Turn on the power switch to let the machine run for 1-2 minutes before you start. Please ensure the machine is on a steady surface and does not shake when turned on.

### Ready to Make Fairy Floss:

Place one measured scoop of sugar into the centre of the running head. This is the heating element in the middle which draws all the power.

Place your stick inside the bowl, twirl the stick in your fingers and also move in an anti-clockwise direction. Avoid rolling the stick of floss along the side of the bowl, you will pick-up the waste which isn't soft and fluffy and makes the flossy heavy. Make sure you have the stick low to the bottom of the bowl so that the fairy floss grips the stick well. Make it to the size you want. If you don't refill the head often then the machine will get too hot and floss will go thick like rope and burn.

### End of Use:

Turn the machine off and let cool. Once cooled switch off machine motor and remove power lead from the machine.

Never attempt to repair the machine. Please call us if you have any problems 0426 889 520.

### Important:

**Do not attempt to operate the machine from portable generators.**

**Only one person to operate the machine at one time - (Minimum age 18). Only one person to operate the machine at one time - (Minimum age 18). The nominated person on the booking is responsible for the safe and care of the machine for the duration of the party. Until collection, the hirer will be responsible for any injury to people or damage to the machine or property, resulting from misuse or mis-handling of the machine, whether accidental or not.**



## Western Sydney Jump

Affordable & Reliable Party Hire

Jumping Castles, Carnival Food, Adult  
Inflatables, Giant Garden Games

Call 0426 889 520  
westernsydneyjump.com.au



## Slushy Machine Instructions

Please call us if you have any problems 0426 889 520

### Setting Up:

Please do not run any other machines on the same power point. Please place the machine under shade to protect against wind and sun. Keep out of direct sunlight and heat as much as possible.

### Ready to Make Slushy:

Pour the slushy syrup provided into the barrel – for 50 serves, add water to fill half a tank. For 100 serves – add water to max line on tank. Maximum 100 serves at one time. Turn on all three switches and turn the thermostat knob to the far right – the coldest setting. 50 serves will take an hour to freeze, 100 serves will take 2 hours to freeze.

Do not add your syrup or cordial as this can damage the machine.

### End of Use:

Turn off all buttons and unplug the machine. Empty out remaining slushy.

Never attempt to repair the machine. Please call us if you have any problems (Tanya) 0426 889 520.

### Important:

**Do not attempt to operate the machine from portable generators.**

**Only one person to operate the machine at one time - (Minimum age 18). The nominated person on the booking is responsible for the safe and care of the machine for the duration of the party. Until collection, the hirer will be responsible for any injury to people or damage to the machine or property, resulting from misuse or mis-handling of the machine, whether accidental or not.**



## Western Sydney Jump

Affordable & Reliable Party Hire

Jumping Castles, Carnival Food, Adult  
Inflatables, Giant Garden Games

Call 0426 889 520

[westernsydneyjump.com.au](http://westernsydneyjump.com.au)



## Large Bubble Machine Instructions

Please call us if you have any problems 0426 889 520

### Setting Up:

Please do not run any other machines on the same power point. Please place the machine under a tent for protection against wind and for shade from the sun.

### Ready to Make Bubbles:

Pour the bubble liquid into the front area of the bubble machine. Turn on the bubble machine and watch the bubbles begin to form.

### End of Use:

Turn off the machine. Empty out remaining bubble liquid by tipping out from the front.

Never attempt to repair the machine. Please call us if you have any problems 0426 889 520.

### Important:

**Do not attempt to operate the machine from portable generators.**

**Only one person to operate the machine at one time - (Minimum age 18)**



## Western Sydney Jump

Affordable & Reliable Party Hire

Jumping Castles, Carnival Food, Adult  
Inflatables, Giant Garden Games

Call 0426 889 520  
[westernsydneyjump.com.au](http://westernsydneyjump.com.au)

